



ExBin-FR Frost protection thermostat

Electrical, explosion-proof frost protection thermostat 24 VAC/DC supply voltage, potential free relay output EC type-approved in acc. with ATEX directive 2014/34/EU for zone 1, 2, 21, 22

ExBin - FR3
ExBin - FR6
ExBin - FR... -CT

Subject to change!

Compact. Easy installation. Universal. Cost effective. Safe.

Туре	Capillary length	Supply	Output	Max. ratings	Wiring diagram	
ExBin- FR3	3 m	24 VAC/DC	Relay contact	250 VAC, 0.1 A / 30 V, 0.5 A	SB 1.0	
ExBin- FR6	6 m	24 VAC/DC	Relay contact	250 VAC, 0.1 A / 30 V, 0.5 A	SB 1.0	
ExBin- FR CT	Types as above with aluminium housing and seawater resistant coating					
	(sensor connection and c	able glands brass nickel-plate	ed, screws in stainless steel)			

Product views and applications

Frost protection thermostat



...Bin-FR...-CT





Description

The ExBin-FR... frost protection thermostat is a revolution in HVAC systems, in chemical, pharmaceutical, industrial and offshore/onshore plants, for use in hazardous areas zone 1, 2 (gas) and zone 21, 22 (dust)

Highest protection class (ATEX) and IP66 protection, small dimensions, universal functions and technical data guarantee safe operation even under difficult environmental conditions.

All frost protection thermostats are programmable on site without any additional tools. The switching point is scalable within the maximum ranges.

Highlights

- ► For all types of gases, mists, vapours and dust for use in zone 1, 2, 21 and 22
- ► Power supply 24 VAC/DC
- ► Output potential free switching contact
- ► Integrated Ex-e terminal box
- ► No addional Ex-i module required
- ► No intrinsically safe wiring/installation between panel and sensor required
- ▶ No intrinsically safe wiring/installation and no space in the panel required
- ► LED switching state indication
- ► Compact design and small dimension
- ► Robust aluminium housing (optional with seawater resistant coating)
- ► IP66 protection


ExBin-FR_e V01 - 9-Nov-201






Technical	l data	ExBin	FR3	FR6	
Supply volta	age, frequency	24 VAC/DC ±20 % (19,2	.28,8 VAC/DC), 50/	60 Hz	
Current, por	wer consumption	150 mA, ~ 4 W, internal fus	se 500 mAT, not rem	ovable	
Galvanic iso	olation	Supply for relay output min	. 1,5 kV		
Electrical co	onnection	Terminals 0,142,5 mm ² a	t integrated Ex-e ter	ninal box, stripping length 9 mm, torque 0,40,5 Nm, e	equipotential bonding 4 mm²
Cable gland	ls	2 × M16 × 1,5 mm, Ex-e ap	proved, for cable di	meter ~ Ø 59 mm	
	CT	2 × M16 × 1,5 mm, Ex-e ap	proved, brass nicke	-plated, for cable diameter ~ Ø 610 mm	
Control eler	ments	Rotary control for setpoint	adjustment and fixin	screw	
Measuring r	range	Setpoint adjustable −10 °C	+15 °C		
Status indic	cation	via LEDs – GREEN: ambie	ent temperature is ab	ove setpoint (normal), RED: ambient temperature is be	low setpoint
Housing ma	aterial	Aluminium die-cast housing	g, coated. Optional v	ith seawater resistant coating (CT)	
Dimensions	s (L × B × H)	~ 180 × 107 × 66 mm (with	out connectors)		
Weight		~ 950 g			
Ambient ter	mperature	-20+50 °C, capillary max	k. +80 °C, storage te	mperature −35+70 °C	
Temperatur	e class	T6 (T80 °C) bei -20+50	°C		
Ambient hu	midity	095 % rH, non condensir	ng		
Sensor circ	uit	Internal intrinsically safe (IS	S) circuit		
Capillary	Length		$3 \text{ m} \pm 15 \text{ cm}$	6 m ±20 cm	
	min. active length	~ 40 cm			
	min. bending radius	2 cm			
Hysteresis		~ 6 K, accurancy of setpoir	nts ±3 K		
Start delay		5 s			
Output		Potential free switching cor	ntact – breaking con	act	
	max. rating load	0,5 A (30 VAC/DC) - 0,1	A (250 VAC) - 0,1	(220 VDC)	
	min. rating load	10 mW / 0,1 V / 1 mA			
Duration of	life mechanical	10 × 10 ⁶			
	electrical (rated load)	100 × 10 ³			
Wiring diag	ram	SB 1.0			
Scope of de	elivery	Frost protection thermostat	t, self-tapping screw	4,2 × 13 mm resp. in stainless steel (withCT version	ns)

Approbationen			
ATEX directive	2014/34/EU		
EC type-approved	EPS 14 ATEX 1 657		
IECEx certified	IECEx EPS 14.0074		
Approval for gas	II 2 (1) G Ex e mb [ia Ga] IIC T6 Gb		
TypesCT	II 2 (1) G Ex e mb [ia Ga] IIB T6 Gb		
Approval for dust	II 2 (1) D Ex tb [ia Da] IIIC T80°C Db IP66		
CE identification	CE № 0158		
EMC directive	2014/30/EU		
Enclosure protection	IP66 in acc. with EN 60529		
EAC	TC RU C-DE.ГБ08.В.01510		

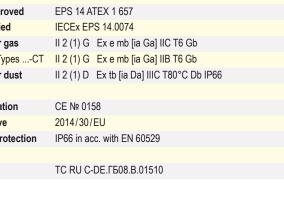

Accessories MKR Mounting bracket for round ducts up to \varnothing 600 mm Installation Kit 1.3 Assembly cramp and 4 assembly brackets for ...Bin-FR3 Installation Kit 1.6 Assembly cramp and 8 assembly brackets for ...Bin-FR6

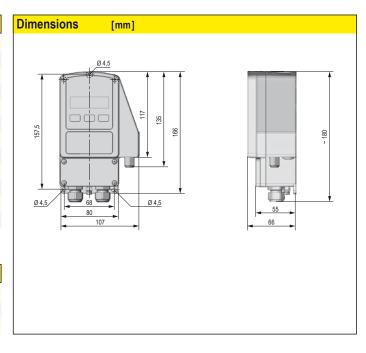

ExBin-FR_en V01 - 9-Nov-2016





Electrical connection


All frost protection thermostats require a 24 VAC/DC power supply. The electrical wiring must be realized via the integrated Ex-e terminal box acc. to ATEX. The terminals' type of protection is "Increased safety Ex-e".

Attention: Before opening the terminal box cover, the supply voltage must be shut off! The supply has to be connected at terminals $1 (-/\sim)$ and $2 (+/\sim)$.




At different relay and supply voltages (24 VAC/DC) the cable installation must be considered (see "Information for Installation")!



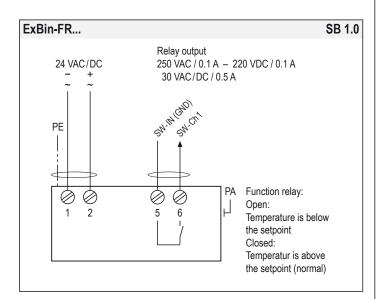

Intrinsically safe parameters (IS) – Internal contact						
U _o =	7.14 V	$C_i \rightarrow 0$		IIC		IIA
	8 mA	$L_i \rightarrow 0$	L_{o}	5 mH	10 mH	20 mH
$P_0 = 1$	I5 mW		Co	1.5 µF	6.7 µF	8.6 µF

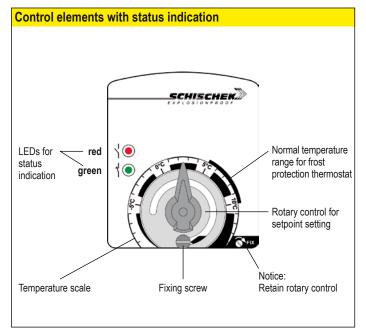

A. Installation, commissioning, maintenance

All national and international standards, rules and regulations must be complied with. Certified apparatus must be installed in accordance with manufacturer instructions. If the equipment is used in a manner not specified by the manufacturer, the safety protection provided by the equipment may be impaired. For electrical installations design, selection and erection, EN/IEC 60079-14 can be used.



Attention: Apply all Ex rules and regulation before opening the internal terminal box. Do not open cover when circuits are live!

Draw the wiring cables through the cable glands. For connection use the internal Ex-e approved terminal box and connect equipotential bonding.

After connection install the cables in a fixed position and protect them against mechanical and thermical damage. Close all openings and ensure IP protection (min. IP66). Avoid temperature transfer and ensure not to exceed max. ambient temperature! For outdoor installation a protective shield against sun, rain and snow should be applied. Sensors are maintenance free. An annual inspection is recommended. For electrical installations inspection and maintenance, EN/IEC 60079-17 can be used. Clean with damp cloth only.

Ex sensors must not be opened and repaired by the end user.

B. Long cabling


We recommend using shielded signal wires and to connect one end of the shield to the ...Bin-... terminal box.

C. Separate ground wires

For supply and signal wires use separate grounds.

D. Relay output

Wires for safety extra-low voltage must be installed separately from other circuits. At 24 VAC/DC only supply and signal wires are permitted in one cable, in all other cases use separate or double isolated cables. An over-current protection fuse < 10 A has to be provided by the installer.

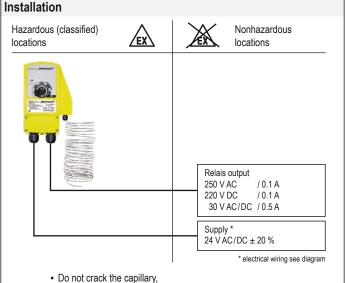

note capillary's bending radius

ExBin-FR_e V01 - 9-Nov-201